

# Polaroid



## PL-POD1017

10.1" Portable  
DVD Player

## User Manual

# Welcome

Welcome to your experience with Polaroid products.

All Polaroid products we bring to you are manufactured to the highest standards of performance and safety. As part of our philosophy of customer service and satisfaction, your purchase is backed by a comprehensive 1 Year Warranty.

This user manual tells you all you need to know about setting up and using your new product.

Please take special note of any important safety and usage information presented with the  symbol.


# Contents

Welcome	2
Product Overview	4
Controls and Connections	5
Remote Control	9
Operation	12
Troubleshooting	20
Specifications	22
Compliance and Responsible Disposal	23

# Product Overview


## What's in the box:

- A. 10.1" Portable DVD Player
- B. Remote Control
- C. AAA Batteries
- D. 12V Car Adaptor
- E. AC Adaptor
- F. AV Cable
- G. User Manual
- H. Warranty Certificate
- I. General Safety Warnings

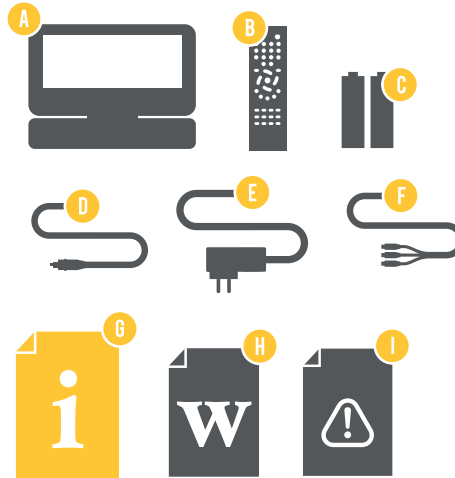


# Controls and Connections

## Front view

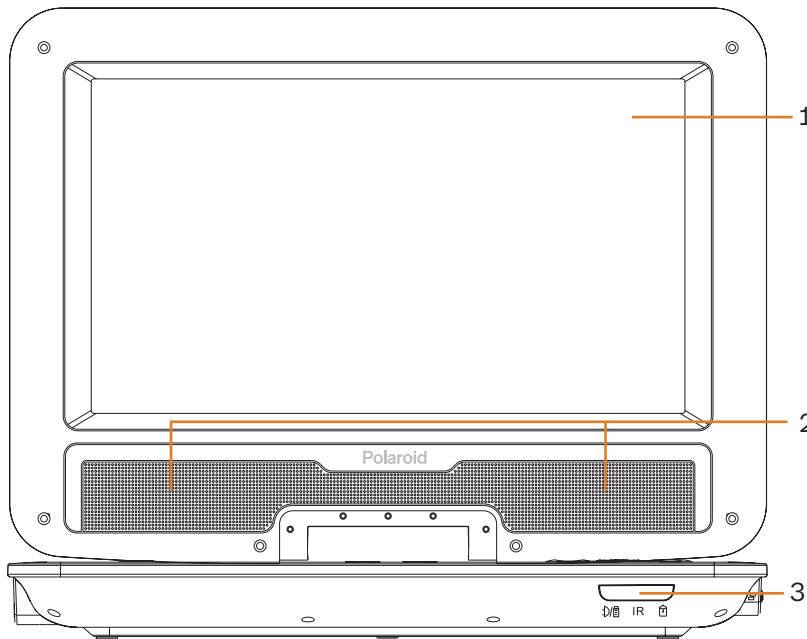


1. LCD TFT screen
2. Speakers
3. Infra-red signal receiver: Accepts remote control signal.  
Left LED Indicator: RED when charging;  
GREEN when fully charged.  
Right LED Indicator: RED when on  
standby; GREEN when the player is  
ON.

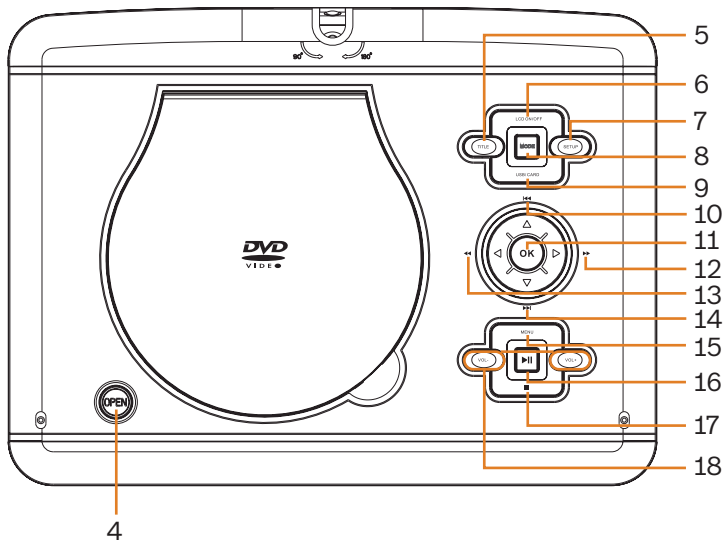

4. OPEN: Push down to open the disc compartment cover.
5. TITLE: When in DVD mode, go to the title menu of a DVD.
6. LCD ON/OFF: Turn the display on/off.
7. SETUP: Enter/exit the System Setup menu. In AV mode, press to enter/exit the TFT setup menu.
8. MODE: Press repeatedly to cycle through DVD/AV modes.
9. USB/CARD: Switch between DVD, USB and SD Card modes.

10. PREV/UP: Skip to the previous title, chapter or track; navigate up.
11. OK: Confirm or enter.
12. FWD/RIGHT: Fast forward; navigate right.
13. REV/LEFT: Fast rewind; navigate left.
14. NEXT/DOWN: Skip to the next title, chapter or track; navigate down.
15. MENU: Return to the disc's main menu when in DVD mode. Set the PBC menu function on/off in VCD mode.
16. PLAY/PAUSE: Play or pause playback.
17. STOP: Stop media playback.
18. VOL-/VOL+: Decrease or increase the volume level.

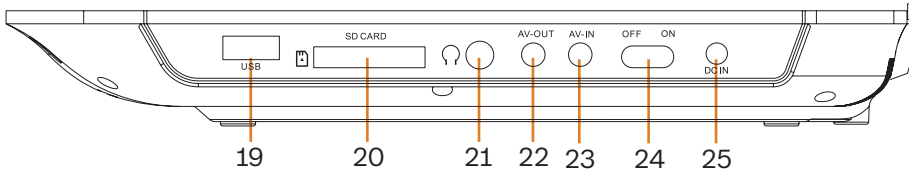

19. USB Slot: See below.

20. SD Card Slot: See below.




21. Headphone Jack: See below

22. AV OUT Socket: See next page.

23. AV IN Socket: See next page.

24. ON/OFF Switch: Turn ON/OFF power to the unit completely.

25. DC IN: See next page.

19	USB		STORAGE	Playback your multi-media files, including videos, music and photos.
20	SD/MMC Card Slot			Insert a SD/MMC memory card to playback your multi-media files, including videos, music and photos.
21	Earphone Jack		SOUND	Connect to your earphones, amplifier or audio device, using an AUX cable (not included).

22 AV OUT



PICTURE

SOUND

Send the image from the DVD player to a TV screen using the supplied AV cable. The AV cable must be connected to an external TV device and the DVD screen will be off when viewing from a TV screen.

23 AV IN



PICTURE

SOUND

Send the image from another device to the DVD player using the supplied AV cable.

25 DC IN




POWER

Connect the supplied AC adaptor or car adaptor to power and charge the unit.



# Remote Control

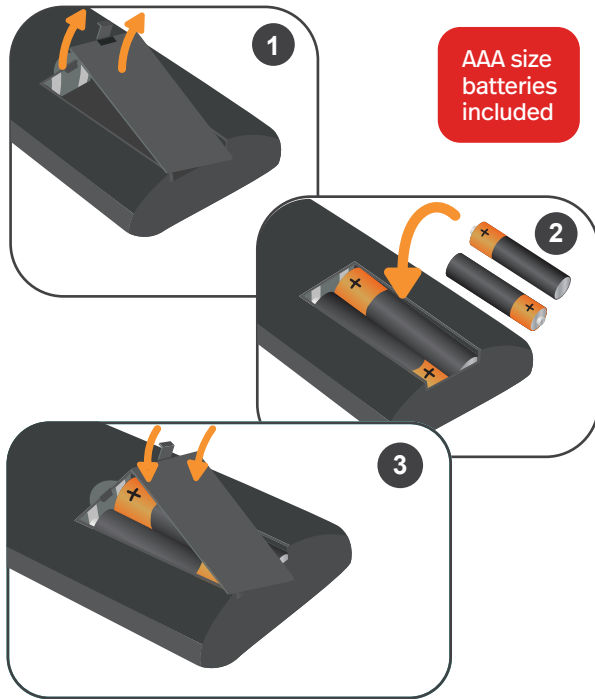

## Setup

Insert two AAA size batteries according to the polarity markings (+ / -) inside the compartment. Make sure the batteries are correctly aligned and properly pushed into place.



## Precautions When Using Batteries

- Do not use old and new batteries together.
- Do not use different types of batteries (e.g. Manganese and Alkaline batteries) together.
- Remove the batteries from the remote if you do not intend to use it for a long time.
- When discarding used batteries, follow any guidelines for recycling and disposal of batteries that apply in your local area.
- Keep batteries away from children and pets.
- Never throw batteries into a fire or expose them to extreme heat.

## Buttons and functions

**LCD ON/OFF:** Turns off the display while still playing audio to help save battery life.

**NUMBER BUTTONS:** Numerical input to directly access a specific chapter or track.

**SETUP:** Access/exit the system setup menu.

**▲ / ▼ / ◀ / ▶:** Navigate the system menu.

**OK:** Confirm a selection.

**◀◀:** Skip to the previous title, chapter or track.

**◀◀:** Fast rewind current track.



**POWER:** Put the DVD player on standby/on.

**VOL + / -:** Increase/Decrease volume.

**🔇 / MUTE:** Mute the sound. Press again to restore the sound (This will mute the AV output sound as well).

**MODE:** Press repeatedly to cycle through DVD/AV IN mode.

**▶▶:** Skip to the next title, chapter or track.

**▶▶:** Fast forward current track.

**⏸:** Play/pause playback.



**OSD:** Display/hide detailed information about the currently playing media.

**SUBTITLE:** Turn the subtitle on/off.


**STEP:** Press to freeze the current frame, press repeatedly for following frames.

**ANGLE:** While playing a DVD with multi-angle recording, press repeatedly to select the viewing angle.

**ZOOM:** During DVD playback, press repeatedly to zoom in or out of the picture.

**PROG:** Enter or exit the program function.

**A-B:** During DVD playback, press to define a starting point, then press again to define a finishing point. The selected portion will then be played continuously. To cancel, press the A-B button again. (Function not available for all discs).

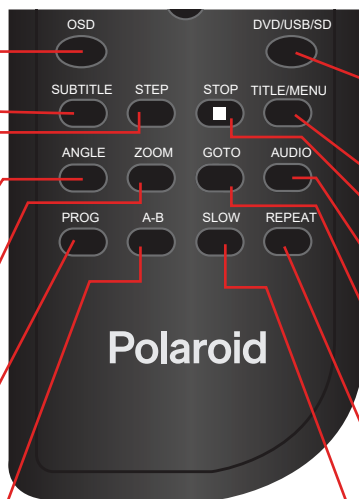

**DVD/USB/SD:** Switch between DVD, USB and SD card playback mode.

**TITLE/MENU:** Return to the disc's title menu in DVD mode. Turn the PBC menu on/off during VCD playback.

**■ / STOP:** Stop playback.

**AUDIO:** DVD mode: select multi language sound. CD/VCD/SD card/USB: select audio channel.

**GOTO:** Press to input a specific title/ chapter/time to jump to on the DVD/ CD.

**REPEAT:** Press repeatedly to cycle through available repeat modes.

**SLOW:** To play the video in slow speed.

# Operation

## Rotating the Screen

Place the player on a level surface and open up the monitor vertically, while holding the lower side of the player.

- To rotate the monitor for viewing from the Right side, turn it to the Right slowly. It can be turned up to 90°.
- To rotate the monitor for viewing on the Left side, turn it to the Left slowly. Do not force it beyond 180°.
- Adjust the angle of the monitor backwards or forwards for comfortable viewing. The monitor can also be laid flat.

 NOTE: Do not store the DVD Player with the screen side facing up. This can damage the screen.

## Powering the DVD Player

- This device is powered by a rechargeable lithium ion battery.
- To charge the battery, first make sure that the player is switched OFF. Connect the DC jack of the AC/car power adaptor to the socket and the other end to an appropriate electrical outlet.

**WARNING:** Only use the supplied AC/car adaptor for charging the DVD Player. Charging with a different adaptor may cause damage or an explosion.

**WARNING:** Do not leave the DVD player unattended while charging.

- During charging, the red LED light will illuminate indicating that the battery is being charged. It takes about 4 hours to fully charge the battery. With a full charge, the player can be used continuously for up to 2.5 hours without recharging.
- Once fully charged you can disconnect the device from the charger, or leave the charger connected and run the player on the Mains electricity to save battery power.

- You can also recharge and run the player in the car with the supplied car power adaptor, which attaches easily to the car's cigarette lighter. The car adaptor can only support vehicles with 12V output. Larger vehicles that may use 24V output are not supported.

NOTE: During playback, it is normal for the appliance to produce heat. Avoid using for an extended period of time.

## Turning the Player ON/OFF

Once the player is fully charged, or connected to an electrical outlet via the AC/DC power adaptor, slide the POWER switch to turn the player on. The indicator light will glow green. Slide the power switch again to turn it off.

## DVD/CD Playback

- Gently press on the OPEN button to open the disc cover. Any protective sheeting under the disc cover must be removed before first use.
- Place a disc with the playback side facing down and the label facing up and gently push on the center of the disc to fix it to the spindle. The player will not recognise the disc if it is not inserted correctly.
- Close the disc cover. The disc will begin to play automatically. If this does not occur, press the **▶▶** button.
- Pause: Press the **⏸** button to pause playback. Press again to resume playing.
- Stop: Press the **■** button to stop playback.
- Forward/Rewind: Press the **▶▶** / **◀◀** buttons to fast forward/rewind. Repeat this motion to increase the speed. The speed can be increased up to 20x. Press PLAY to resume playing.
- Previous/Next track: Tap the **◀◀** / **▶▶** buttons for previous/next track.
- GOTO: Press the GOTO button and enter a title, chapter, track or time and press OK.



- **PROGRAM:** Press the PROG button to access the playlist setup menu. For VCD, there are 16 settings from 1 to 16. Use the number keys to enter the track number for each item then select Play. For DVD, input the title and chapter numbers in the sequence you want to play them. For CD, press the PROG button to enter, then use the arrow buttons on the remote to highlight the tracks you want to select. Press the OK button to select and the track will be added to the playback list on the left. When you're done selecting, use the arrow buttons to select the Play icon on the list, then press OK to start play.
- Key in the desired track or chapter numbers into the list in sequence. Select the PLAY option at the bottom of the screen to start playing the programmed sequence. Select EXIT to cancel the program function.
- Other functions such as angle, audio language and subtitles are available depending on the disc format and content.
- **NOTE:** If the unit is connected to an external screen such as a TV, ensure that the TV is switched to the correct input mode (such as AV mode). The DVD Screen will turn off when the AV cable is plugged into the TV. To resume watching from the DVD screen, please unplug the AV cable from the TV.
- To remove the disc, press the OPEN button and remove the disc by lifting from beneath while gently pressing down on its centre.

## Adjusting the Volume

- Use the VOL- and VOL+ buttons on the main unit (or on the remote control) to adjust the volume of the speaker or headphones.
- **NOTE:** If the unit is connected to an external screen such as a TV, muting the DVD player's volume will mute TV sound as well. For all other sound controls, use TV controls.

## Using Headphones

To listen to audio using Headphones, plug them into the EARPHONE socket on the right side of the player. The speakers will automatically disable the sounds output when headphones are connected.

- Turn OFF the player before connecting/disconnecting the headphone cable as movements from moving the plug may cause disc damage.

**CAUTION:** To prevent permanent hearing damage, keep the volume at a moderate level when using headphones. Before connecting, turn down the volume and then re-adjust it when playback starts.

## USB/Multimedia Playback

- This unit only supports USB devices with a FAT32 file system and maximum of 32GB.
- This unit supports playback of video, music, JPEG and e-book (txt) files. However, due to other variations in file formats, some files may not play even though they are supported devices.
- DO NOT use external Hard Disk Drives as they are generally not suitable for use with this unit. We suggest using USB flash drives up to 32GB and formatted in the FAT32 file system.
- Only use USB2.0 USB media.

## Playing Content From a USB Drive or SD/MMC Card

This unit supports playback of video, music, JPEG and e-book (txt) files.

- Insert a USB drive into the USB port (and/or a SD/MMC memory card into the card slot) on the right side of the player.
- Press the USB/CARD button on the unit or the DVD/USB/SD button on the remote to enter the source selection screen.
- Use the ▲/▼/◀/▶ navigation buttons to select the desired source and press the OK button to confirm selection.
- Press the TITLE/MENU button to return to the USB/SD card main menu.
- Use the appropriate buttons on the unit or on the remote to control multimedia playback.

## Connecting to the TV

- Connect the 3.5mm end of the supplied AV cable to the AV OUT jack of the Portable DVD Player.
- Connect the Yellow RCA plug to the Video In jack of the TV.
- Connect the Red RCA plug to the Audio In R jack of the TV.
- Connect the White RCA plug to the Audio In L jack of the TV.
- Using the TV remote control, switch the TV input source to AV mode.
- Note: AV IN and AV OUT modes cannot work simultaneously. During AV IN mode, the AV OUT port has no signal output. The DVD screen will turn off when the AV cable is plugged into the TV. To resume watching from the DVD screen, please unplug the AV cable from the TV.

## Watch Videos From an External Video Source

- Connect the 3.5mm end of the supplied AV cable to the AV IN jack of the Portable DVD Player.
- Connect the Yellow RCA plug to the Video Out jack of the external video device.
- Connect the Red RCA plug to the Audio Out R jack of the external video device.
- Connect the White RCA plug to the Audio Out L jack of the external video device.
- Press the MODE button on the Portable DVD Player or the remote control to change the input source to AV IN mode.



## System Setup Options

### Menu Operation

- Press the SETUP button on the DVD player or the remote to display the system setup menu, where you can configure the operation of the player.
- Use the ▲ and ▼ arrow keys to select the targeted setup page.
- Use the ◀ and ▶ keys to select the setup items you want to adjust, then press OK or ► for access. Press the ▲ and ▼ arrow keys to choose options, and press OK to confirm.
- Use the arrow keys to keep selecting other setup items for adjustment.
- Press ◀ to return to the previous menu.
- Press the SETUP button again to quit the system setup menu.

## System Setup Menu

### TV System

You can select PAL, NTSC or Auto, depending on the disc type.

**Note:** this function only works when an AV cable is plugged into the AV OUT port of the DVD player to a external TV screen.

### Power Resume

This enables the player to remember the last playback point on the disc before it was turned OFF or stopped. When the disc is started again, it will start playing from this memory point. This feature can be turned on or off.



## Screen Saver

The screen saver will activate when you pause the video for over 5 minutes. Press any button to exit the screen saver. You can turn this setting on or off.

When the screen saver is on for 5 minutes, the DVD player will go into standby mode. Press the power button on the remote control to turn the DVD player back on.

## TV Type

Set screen aspect ratios:

- 4:3PS: When the unit is connected to a TV, a wide screen picture will display on the entire TV screen, but sections of the right and left of the picture are cut off.
- 4:3LB: when the unit is connected to a TV, a wide screen picture will display on the entire screen, but with black stripes above and beneath the picture.
- 16:9: When this machine is connected to a wide screen TV, you can select this option. The wide screen image will be displayed across the full screen, stretched horizontally.

## Password

Select the password for parental rating. The default password is "0000." You can change the password after the lock icon appears as an open lock. When the icon is an open lock, enter a new 4-digit password and press OK to confirm the change.

Note: Use "4711" to unlock if you forget your password.

## Rating

Set the parental rating on which DVDs can be played (only available when password is unlocked).

## Default

Restore to factory default settings.

## Language Setup

Choose from a selection of languages for OSD (On-Screen Display), Audio, Subtitle and Menu language. Note: if the video disc does not contain the selected language, the default setting of the video will be selected.

## TFT Setup

Adjust the brightness, Contrast, Hue and Saturation of the DVD screen.

## Video Setup

Adjust the Video Out signal, including Brightness, Contrast, Hue, Saturation and Sharpness.

## Digital Setup Menu

### Downmix

Use to combine 5.1 channel digital audio and 2.0 channel stereo audio.

- LT/RT: downmixes from 5.1 channel to stereo. Available for 5.1 channel DVDs only. For CD play, please select "stereo".
- Stereo: available for CD play. The left speaker will play on the rear left channel and the right speaker will play on the rear right channel.



# Troubleshooting

If you encounter any problems with your DVD Player, please check this list of possible issues for a solution. If you don't find a solution here, contact After Sales Support on 1300 886 649.

Problem	Solution
The power light does not come on.	<ul style="list-style-type: none"><li>• Make sure the power cable from the AC/car adaptor is firmly inserted into the socket on the right side of the player.</li><li>• Make sure the power cord from the wall outlet is connected securely to the power adaptor and wall outlet.</li><li>• Make sure that the outlet is switched on, and check that the outlet is working by plugging in a different appliance.</li><li>• Run the player with the power adaptor plugged into a wall outlet, or the car adaptor plugged into the vehicle's cigarette lighter socket to recharge the battery.</li></ul>
There is no picture on the external TV display.	<ul style="list-style-type: none"><li>• Make sure that the correct source is selected on the external display. Also make sure that the AV cable is properly connected.</li></ul>
There is no picture on the DVD screen.	<ul style="list-style-type: none"><li>• Press the LCD ON/OFF button on the remote control.</li><li>• Make sure that the AV cable is unplugged and not connected to an external TV screen.</li></ul>
No Sound	<ul style="list-style-type: none"><li>• Press the VOL + button to increase the volume level.</li><li>• Unplug the earphones to enable sound from the speaker.</li><li>• Press the PLAY/PAUSE button to restore normal playback and sound.</li><li>• Press the MUTE button to restore sound.</li></ul>

Problem	Solution
The remote control does not work.	<ul style="list-style-type: none"> <li>• Check and replace the batteries, if necessary.</li> <li>• Check and ensure that two AAA size batteries are inside the compartment and that they are inserted and oriented properly.</li> <li>• Remove the obstacle in the transmission path.</li> <li>• Move closer to the display. Use the remote within 6 metres of the display.</li> <li>• Make sure to aim the remote control at the sensor at the front of the player, near the indicator light.</li> </ul>
The disc cannot be played.	<ul style="list-style-type: none"> <li>• Make sure to place the disc label-side up into the disc compartment.</li> <li>• Close the disc cover.</li> <li>• Ensure the disc is not scratched or dirty. Clean and reinsert the disc if necessary.</li> <li>• Ensure that the disc has a format which is compatible with the player.</li> </ul>
Cannot play video files from a USB drive or SD card	<ul style="list-style-type: none"> <li>• This DVD player supports limited playback formats. The video resolution must be below 720 x 480 with less than 30fps. Some files may not be supported.</li> </ul>

For Technical and Warranty Support

1300 886 649

[www.tempo.org](http://www.tempo.org)

[info@tempo.org](mailto:info@tempo.org)

Distributed by Tempo (Aust) Pty Ltd,  
PO Box 6056, Frenchs Forest DC 2086



# Specifications

Power adaptor	Input: AC 100-240V, 50/60Hz Output: DC 12V, 1.0A
Car adaptor	Input: DC 12V 2A Output: DC 12V 2A
Main unit	Input: DC 12V 1A
Compatible disc types	DVD, Audio-CD, VCD, SVCD
Battery	7.4V, 2000mAh



Compatible with all DVD regions  
in PAL or NTSC format

## Compliance and Responsible Disposal



### Packaging

The packaging of your product has been selected from environmentally friendly materials and can usually be recycled. Please ensure these are disposed of correctly. Plastic wrapping can be a suffocation hazard for babies and young children, please ensure all packaging materials are out of reach and are safely disposed of. Please recycle these materials rather than throwing them away.



### Compliance

This product complies with the Australian Safety Standard AS/NZS 60065 to ensure the safety of the product.

### Product

At the end of its working life, do not throw this product out with your household rubbish. An environmentally friendly method of disposal will ensure that valuable raw materials can be recycled. Electrical and electronic items contain materials and substances which, if handled or disposed of incorrectly, could potentially be hazardous to the environment and human health.

 


# Polaroid



**Have questions? We've got answers.**

Visit us at [tempo.org/support](https://tempo.org/support) or give us a call at 1300 886 649



Instantly recognizable. Instantly reassuring. The Polaroid Classic Border and Polaroid Color Spectrum logos let you know you've purchased a product that exemplifies the best qualities of our brand and that contribute to our rich heritage of quality and innovation.

Polaroid, Polaroid Color Spectrum and Polaroid Classic Border Logo are trademarks of PLR IP Holdings, LLC, used under license . PLR IP Holdings, LLC does not manufacture this product or provide any Manufacturer's Warranty or support.

©2020 All rights reserved.