

# Polaroid

## PLSTN320BK, PLSTN320WT Wireless Headphones

### User Guide

 
#### 1 Have you got everything?



A. Wireless Headphones



B. Micro USB Charging Cable



C. 3.5mm Audio Cable



D. Micro USB to USB-C Adaptor



E. User Guide



F. Warranty Certificate

#### Buttons on the Headphones



1

2

3

4

5

6

7

8

1. Micro SD Card Slot
2. Built-in Microphone
3. AUX In Port

4. LED Status Indicator
5. Micro USB Port
6. ◀◀/V - Button

7. ⏻ / ▶▶ Button
8. ▶▶/V + Button

#### 3 Operation

##### Power on and pair with a Bluetooth device

Press and hold the ⏻ / ▶▶ button on the headphone. The LED status indicator will flash red/blue, indicating it is ready to pair with a Bluetooth device. Turn your smart phones Bluetooth and select "PLSTN320XX" on the list of available devices. Once successfully, you will hear a notification sound and the LED status indicator will light up blue. Music from your smart phone will now be played through the headphones.

- Press the ◀◀/V - button to decrease the volume level. Press and hold to play the previous song.
- Press the ▶▶/V + button to increase the volume level. Press and hold to play the next song.
- Press the ⏻ / ▶▶ button to play/pause the song.

##### Bluetooth call function

Once successfully connected to your smart phone, you can answer/reject incoming phone calls. Press the ⏻ / ▶▶ button to answer in an incoming call. Press and hold the ⏻ / ▶▶ button to reject the call. Press the ⏻ / ▶▶ button twice to redial the most recent phone number.

- Press the ◀◀/V - button to decrease the volume level.
- Press the ▶▶/V + button to increase the volume level.

##### Radio function

Press and hold the ◀◀/V - and ▶▶/V + buttons to switch to Radio mode. Press the ⏻ / ▶▶ button to start auto searching for FM stations, the LED status indicator will flash. After auto search, the headphone will store the FM stations.

- Press the ◀◀/V - button to decrease the volume level. Press and hold to play the previously saved FM station.
- Press the ▶▶/V + button to increase the volume level. Press and hold to play the next saved FM station.

##### AUX mode

Connect the supplied 3.5mm audio cable to the AUX In port of the headphone and the other end to your audio device. The headphone will automatically switch to AUX mode and power off.

##### Micro SD mode

Insert a Micro SD card to the Micro SD port of the headphone. The headphone will automatically switch to Micro SD mode and you can use the ◀◀/V - and ▶▶/V + buttons to decrease/increase volume.

##### Power off and charging

When the battery is low, a voice prompt " low battery, please change" will be heard. Connect the supplied micro USB charging cable to the micro USB port and the other end of a USB power source. The LED status indicator will light up red during charging and disappear when fully charged.

Press and hold the ⏻ / ▶▶ button to power off the headphone. If not paired with a Bluetooth device, it will automatically power off after 5 minutes.

# Troubleshooting



- |                                      |   |
|--------------------------------------|---|
| Cannot hear audio through headphones | <ul style="list-style-type: none"><li>• Ensure the headphones are paired with your smart phone, the LED indicator will light up blue.</li><li>• Increase the volume.</li><li>• Power off your headphones then power them on and pair with your smart phone again.</li></ul> |
| Headphone not charging               | <ul style="list-style-type: none"><li>• Ensure you are connected to a USB power source.</li></ul>   |
| Cannot connect to smartphone         | <ul style="list-style-type: none"><li>• Ensure headphone is on before pairing.</li><li>• Ensure your Smart phones' Bluetooth is turned on.</li><li>• Please power off headphone and start again.</li></ul>  |

## Specifications

Power Input	5VDC, 1A
Playback time	8 hours*
Charging time	3 hours
Battery	3.7V 400mAh
Dimensions (L) x (D) x (H)	185 x 80 x 185 mm
Weight	201g

\* 8 hours of playback time is based on volume no higher than 80%

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Hands (IP) Holdings Pty Ltd is under license. Other trademarks and trade names are those of their respective owners.

## Ok, time to give us a call



What? You mean the User Guide didn't have ALL the answers? Speak to us! We'd love to help you get up and running as quickly as possible. Call our **After Sales Support** on **1300 886 649**.

Operating hours: Monday-Friday, 8:30am-6pm; Saturday, 9am-6pm AEST

## General Safety Warnings

For the safety of yourself and others, follow all instructions and take notice of all the warnings. When adhered to, these safety precautions can reduce the risk of fire, electric shock and injury. This product complies with Australian Safety standard AS/NZS 62368.1 to ensure the safety of the product.



The RCM is a visible indication of a product's compliance with all applicable ACMA regulatory arrangements, including all technical and record-keeping requirements.

### IMPORTANT

**Risk of hearing damage:** Never place the headphones on ears BEFORE turning them on, as the sudden volume may be too high and could cause hearing damage.

Keep the headphones out of ears until you have turned down the volume. Test this by playing the music and holding the headphones near (but not IN) your ear, as you turn the volume down.

Once the volume is turned down, you can place the headphones onto ears and gradually increase the volume to the desired level.

Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach.

To prevent environmental factors (dampness, dust, food, liquid etc.) harming the power bank, only use it in a well-ventilated, clean and dry environment, away from excessive heat or moisture.

Keep the product away from direct sunlight or heat sources.

In case of damage, do not disassemble, repair or modify the product yourself. Contact After Sales Support for advice on repair or replacement, or refer servicing to qualified personnel only.

Children should be supervised to ensure they do not play with the product.

Do not put any object on top of the product.

Do not place or store appliance where it can fall or be pulled into a bath or sink.

This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety.

Do not expose the product to microwaves.

Clean using a dry cloth only - do not use water or chemicals.

Keep the product away from oils, chemicals or any other organic liquids.

Use this appliance only for its intended purpose as described in this guide.

### Responsible disposal of the packaging

The packaging of your product has been selected from environmentally friendly materials and can usually be recycled. Please ensure these are disposed of correctly. Plastic wrapping can be a suffocation hazard for babies and young children, please ensure all packaging materials are out of reach and are safely disposed of. Please recycle these materials rather than throwing them away.

### Responsible disposal of the product

At the end of its working life, do not throw this product out with your household rubbish. An environmentally friendly method of disposal will ensure that valuable raw materials can be recycled. Electrical and electronic items contain materials and substances which, if handled or disposed of incorrectly, could potentially be hazardous to the environment and human health.

## Your new product is ready to enjoy!

Well done, you made it.

Now sit back and relax... your new product is automatically covered by a 1-year warranty. How nice!



**Have questions?  
We've got answers.**

Visit us at [tempo.org/support](http://tempo.org/support) or give us a call at 1300 886 649

Distributed by:  
Tempo (Aust) Pty Ltd

PO Box 132,  
Frenchs Forest,  
NSW 1640

Polaroid, Polaroid Color Spectrum and Polaroid Classic Border Logo are trademarks of PLR IP Holdings, LLC, used under license. PLR IP Holdings, LLC does not manufacture this product or provide any Manufacturer's Warranty or support.

©2021 All rights reserved.